


dorpo Remote Control Code

Value Definition V1.2

1. Version Change Log

Prepared by	Date	Version	Applicable Models	Remarks: [Key changes and reasons]
Peter	2023-04-22	V1.0	X3 UHP-3001 X300	New Document
Peter	2023-05-14	V1.1	X3 UHP-3001 X300	Add more key values for RC05 remote control
Peter	2025-05-26	V1.2	X3 UHP-3001 X300	Added independent Power-On and Power-Off IR/Bluetooth codes, For compatibility with third-party control systems. Note: Requires firmware upgrade to the latest version for support.

2. Remote Control Function Description

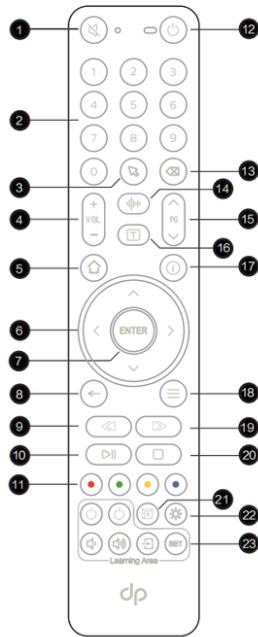

1. Mute
2. Number
3. Air mouse
4. Volume + / -
5. Main Menu
6. Direction
7. Confirm
8. Return
9. Rewind
10. Play/Pause
11. Color
12. Power
13. Delete
14. Audio Track
15. Page Up/Down
16. Subtitles
17. Info
18. Options
19. Fast Forward
20. Stop
21. Resolution
22. Backlight
23. Learning Area

Remote control Instructions

1. Bluetooth Pairing

Point the remote control towards the player's remote sensor, then press and hold the Return and Option buttons on the remote for 5 seconds until the red indicator light flashes. Release the buttons, and the automatic pairing will begin.

2. Infrared Learning

Press and hold the SET button on the remote control's learning area for about 3 seconds, until the red indicator light stays on. Align the infrared emitter window of the remote you want to learn from with the emitter of this remote. Press the button on this remote that needs to be learned once, and the indicator light will flash. Then, press and hold the button on the remote to be learned until the indicator light stays on, indicating successful learning. Repeat this process to learn additional buttons. After completing the learning process, press the SET button to exit the learning mode.

3. Indicator Light

When you press a button, the red light briefly lights up, indicating that Bluetooth is not paired. Please pair it before use. When the red light blinks slowly, it means the battery is low and should be replaced soon.

4. Backlight

The backlight will automatically turn on when you pick up the remote. It will automatically turn off after 5 seconds of inactivity. You can also press the backlight button to turn the backlight on or off. (Note: Enabling the backlight function may reduce battery life.)

3. Bluetooth & Infrared Code Cross-Reference Table

Key Name/Function	Bluetooth Code		IR Code	Description
	Usage page	Usage ID	IR code: NEC User Code : 43BC	
	(HID)	(HID)		
Power-On (Standalone)	/	/	0E	Power-On only
Power-Off (Standalone)	/	/	0F	Power-Off only
Power (Toggle)	0x07	0x0066	1A	Power On/Off toggle
Mute	0x0C	0x00E2	43	Mute toggle
1	0x07	0x001E	0B	Number 1
2	0x07	0x001F	07	Number 2
3	0x07	0x0020	03	Number 3
4	0x07	0x0021	0A	Number 4

5	0x07	0x0022	06	Number 5
6	0x07	0x0023	02	Number 6
7	0x07	0x0024	09	Number 7
8	0x07	0x0025	05	Number 8
9	0x07	0x0026	01	Number 9
0	0x07	0x0027	04	Number 0
Mouse	0x0C	0x0090	11	Air Mouse key
Delete	0x0C	0x01BD	46	Delete input content
Resolution	0x0C	0x00B4	15	Toggle output resolution
Play/Pause	0x07	0x0045	56	Play/Pause control
Settings	0x07	0x0043	00	Quick access to settings
Home	0x0C	0x0223	5C	Short press: Return to home; Long press: Task manager
Info	0x07	0x0041	44	Display information
Up	0x0C	0x0042	18	Navigation: Up
Left	0x0C	0x0044	57	Navigation: Left
OK	0x0C	0x0041	53	Confirm/Select
Right	0x0C	0x0045	4F	Navigation: Right
Down	0x0C	0x0043	10	Navigation: Down
Menu	0x07	0x003D	58	Menu options
Back	0x0C	0x0224	42	Return to previous level
Subtitle	0x07	0x0003	4B	Display subtitle list

Volume+	0x0C	0x00E9	13	Increase volume
Volume-	0x0C	0x00EA	17	Decrease volume
Audio Track	0x0C	0x0092	47	Display audio track list during playback
Previous Track/Page Up	0x0C	0x009C	5E	Previous track (playback) or page up (file list)
Next Track/Page Down	0x0C	0x009D	5D	Next track (playback) or page down (file list)
Red	0x0C	0x0069	1C	Customization function (varies by user settings)
Green	0x0C	0x006A	1D	Customization function (varies by user settings)
Yellow	0x0C	0x006C	1E	Customization function (varies by user settings)
Blue	0x0C	0x006B	1F	Customization function (varies by user settings)
Stop	0x0C	0x0052	52	Stop playback
Fast Forward	0x0C	0x0051	51	Fast-forward playback
Rewind	0x0C	0x0055	55	Rewind playback
Backlight	N/A	N/A	N/A	Enable remote control backlight only